

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:6079

0493

Page 1 of 2

INSTALLATION FOR ATTACHING EXTENSION WAND SLOPED CEILINGS ADAPTER TO LYTESPAN TRACK. FOR USE WITH LYTESPAN® TRACK SYSTEMS ONLY

Extension wand sloped ceiling adapter can be mounted on any Basic, Advent, Multipoint or Monopoint Track on ceilings from 0° to 90° (vertical).

Not for use with Lytespots with attachment fitting 7589.

1. Grasp TOP FITTING at top of ADAPTER and insert it into the LYTESPAN TRACK. The LOCKING LEVER must be on the same side of the track as the BEAD. (See Fig. 1.)
2. Rotate the TOP FITTING 90° clockwise, (See Fig. 2), until LOCKING LEVER snaps and locks in place. (See Fig. 3.) Do not rotate adapter from LOWER FITTING.
3. Loosen KNOB and set the lower half of the ADAPTER to a vertical position and tighten KNOB. (Fig. 4)
4. To Remove: Depress LOCKING LEVER; then rotate TOP FITTING 90° counter-clockwise. Do not rotate wand from LOWER FITTING.

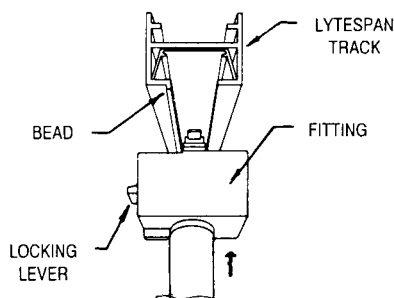


FIG. 1

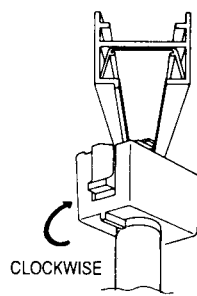


FIG. 2

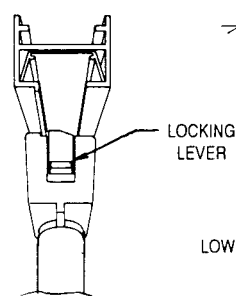


FIG. 3

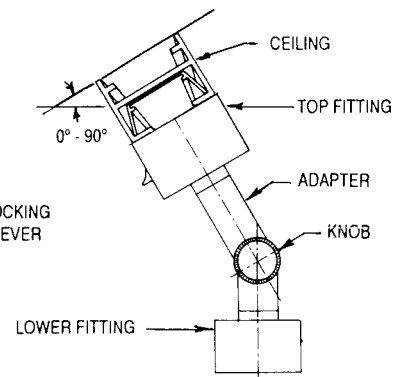


FIG. 4

INSTRUCTIONS FOR CONVERTING FITTING TO OPERATE ON 2 CIRCUIT TRACK SYSTEMS

See Fig. 5. BRASS CONTACT can be raised or lowered. Broken line indicates position for 1 circuit track or lower circuit of 2 circuit track system.

To convert attachment FITTING for upper circuit of 2 circuit track, raise BRASS CONTACT to high position by lifting CONTACT as high as stop permits and CONTACT clicks into place.

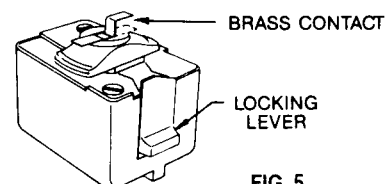


FIG. 5

INSTRUCTIONS FOR ATTACHING EXTENSION WAND TO EXTENSION WAND SLOPED CEILING ADAPTER

1. Insert the WAND FITTING into the LOWER FITTING. The LOCKING LEVER must be on the same side as the bead located at the bottom of the LOWER FITTING (See Fig. 6.) Rotate the WAND FITTING 90° clockwise until LOCKING LEVER snaps and locks in place. (See Fig. 6, 7, & 8).
2. To remove, depress LOCKING LEVER and rotate FITTING 90° counterclockwise.

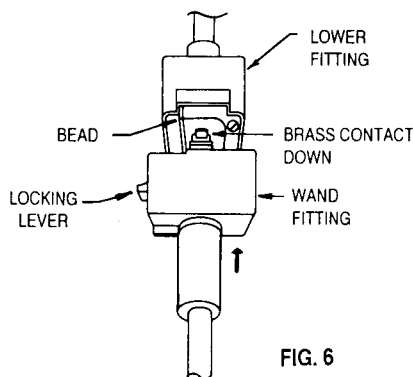


FIG. 6

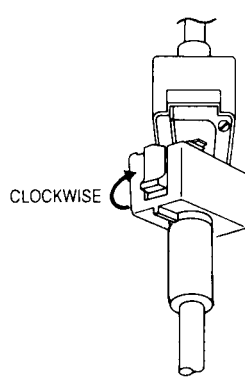


FIG. 7

 


FIG. 8

LIGHTOLIER®

SECAUCUS, NEW JERSEY 07096
MONTREAL, QUEBEC, CANADA

INSTALLATION FOR ATTACHING EXTENSION WAND SLOPED CEILING ADAPTER TO LYTESPAN TRACK. FOR USE WITH LYTESPAN® TRACK SYSTEMS ONLY (Continued)

INSTRUCTIONS FOR ATTACHING LYTESPOT® FIXTURES WITH SQUAT ADAPTER TO WAND SLOPED CEILING ADAPTER

1. Insert the **FIXTURE FITTING** into the **WAND SOCKET**.

The **LOCKING LEVER** must be on the same side as the bead located at the bottom of the wand (See Fig. 9.) Rotate the **FIXTURE FITTING** 90° clockwise until **LOCKING LEVER** snaps and locks into place. (See Fig. 9, 10, & 11).

2. To remove, depress **LOCKING LEVER** and rotate **FITTING** 90° counterclockwise.

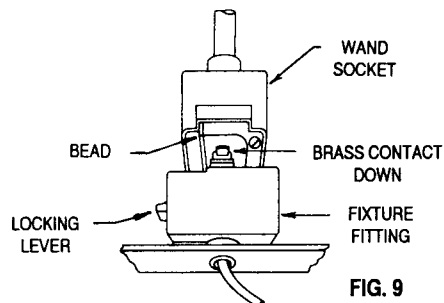


FIG. 9

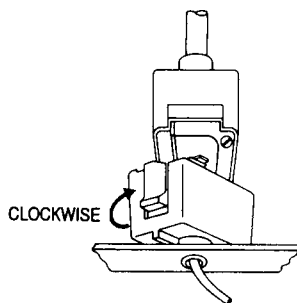


FIG. 10

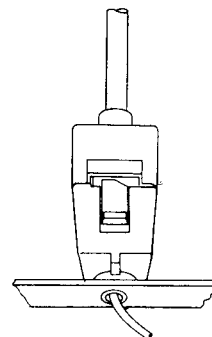


FIG. 11

INSTRUCTIONS FOR ATTACHING LOW VOLTAGE LYTESPOT® TO WAND SLOPED CEILING ADAPTER

1. Insert the **FIXTURE FITTING** into the **WAND SOCKET**.

The **LOCKING LEVER** must be on the same side as the bead located at the bottom of the **WAND SOCKET** (See Fig. 8.) Rotate the **FIXTURE FITTING** 90° clockwise. (See Fig. 12, 13, & 14).

2. To remove, rotate **FITTING** 90° counterclockwise.

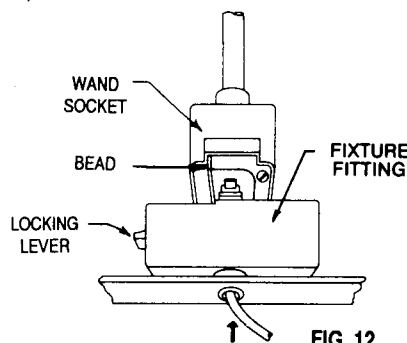


FIG. 12

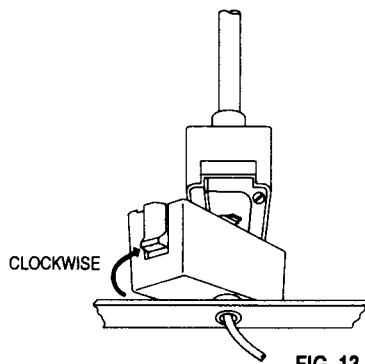


FIG. 13

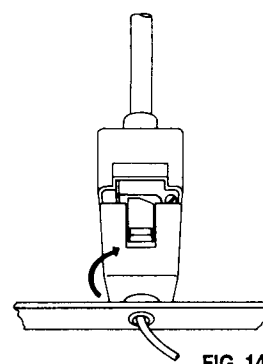


FIG. 14

INSTRUCTIONS FOR ATTACHING LYTESPOT® WITH "T" ADAPTOR TO WAND SLOPED CEILING ADAPTER

1. Align **BEAD** on **WAND SOCKET** with **GROOVE** in **FITTING** before inserting into **WAND SOCKET**, see Fig. 15. (If **BEAD** is NOT aligned a potential hazard may result.)
2. Position **LEVER** as shown in Fig. 15.
3. Insert **FITTING** into **WAND SOCKET**. Turn **LEVER** 90° to make mechanical and electrical connection. See Fig. 16.
4. To remove: reverse procedure.

NOTE: If "T" ADAPTOR has a full gasket on top, remove 1/2" strip of cork between contact hub and grounding spring. If there is no gasket, and a tighter fit to the WAND is desired, remove backing from enclosed GASKET. When centered on FITTING apply pressure on GASKET to secure it.

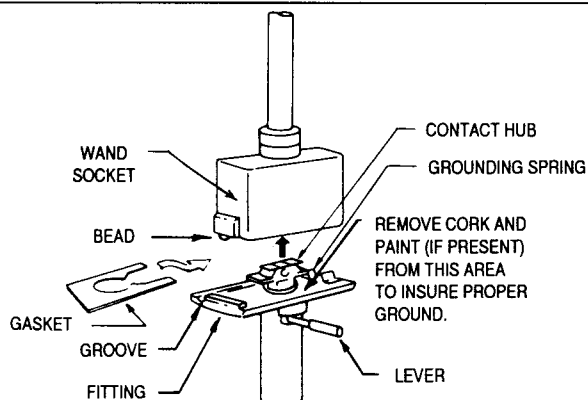


FIG. 15

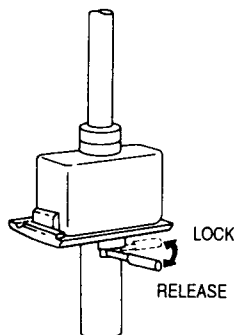


FIG. 16

FIG. 17

"T" ADAPTOR (1" DIA. SHAFT)	BOX ADAPTOR
NOTE: Not designed to work with WAND	